USER MANUAL SOLAR BOLLARD LIGHT











Battery




corrosion







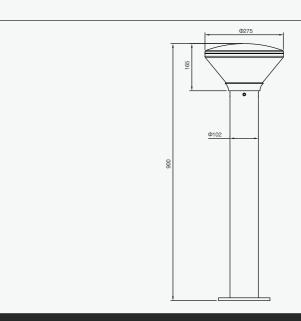

SPECIFICATION		
Solar panel	6.2Watts 5V MONO	
LiFePO4 battery	38.4WH 3.2V	
LED power	1.5W max	
Luminous output(Im)	280lm	
Motion sensor type	Microwave	
Color temperature	2700K~6000K	
Protection rate	IP66 IK10	
Light size	Φ 275mm H:900mm	
Certificates	CE, ROHS, IP66, IK10	
Working program	2H 100%+5H (30%+70%)+4H 20%+6H (10%+40%) sensor time 10 seconds	
Warranty	5 years	

ACCESSORIES IN PACKAGE



Hex Head Cap Screws: 4 pieces To tighten the base to ground. It is M8*80



Allen Wrench: 1 piece Four small screws used to secure the lamp head












HOW TO INSTALL THE LIGHT



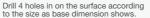




Install the base on a flat surface using four screws. (If it is a complete packaging, installation is complete.)



Use the small screw driver to tighten the screw inside of light head to lock it tightly. (if the light head is separately packed.)

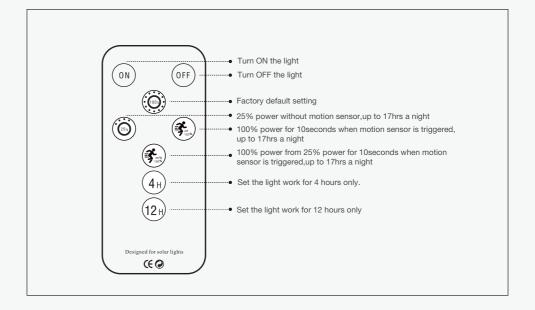

REGULAR TROUBLE SHOT			
PROBLEM	REASON	HOW TO SOLVE	
	Switch is off	Turn on the on/off switch of light	
Light is off	No direct sunshine	Move the light to the direct sunny area	
	Continuous cloudy or rainy days	Light will back to work when sun returns	
	There is debris on solar panel	Clean the solar panel	
Short working time	Location problem	Move the light to the area with direct sunshine	
Short working time	Continuous cloudy or rainy days	Light will be recharged when sun returns	
	Battery life is expired	Replace with a new battery	